





Control property rental time remotely, securely, economically, and easily!

eRL-BE365 Keypad Commands

Change PMC	Press PMC → Press (SCHLAGE) → Press 0 → Press (SCHLAGE) → Press New PMC → Press (SCHLAGE) → Repeat New PMC
Set Date/Time	Press PMC → Press (SCHLAGE) → Press 1 → Press (SCHLAGE) → Press Date/Time YYMMDDHHMM
Delete Unwanted (AC) By PMC	Press PMC → Press (SCHLAGE) → Press 2 → Press (SCHLAGE) → Press Unwanted (AC)
Unlock/Disable Vacation Mode	Press PMC → Press (SCHLAGE) → Press 3 → Press (SCHLAGE)
Change GMC	Press PMC → Press (SCHLAGE) → Press 4 → Press (SCHLAGE) → Press New GMC → Press (SCHLAGE) → Repeat New GMC
Erase Memory	Press PMC → Press (SCHLAGE) → Press 5 → Press (SCHLAGE)
Turn Beeper On/Off	Press PMC → Press (SCHLAGE) → Press 6 → Press (SCHLAGE)
Enable/Disable Turn Lock Feature	Press PMC → Press (SCHLAGE) → Press 7 → Press (SCHLAGE)
Enable Vacation Mode	Press PMC → Press (SCHLAGE) → Press 8 → Press (SCHLAGE)
Download Audit Trail	Press PMC → Press (SCHLAGE) → Press 9 → Press (SCHLAGE)
Delete Unwanted (AC) By (AC)	Press (AC) → Press (SCHLAGE) → Press Unwanted (AC)
Unlock By (AC)	Press (AC)
Create PC	Press (AC) → Press (SCHLAGE) → Press PC → Press (SCHLAGE)
Unlock By PC	Press PC → Press (SCHLAGE)
Restore All Factory Settings	 → Press (SCHLAGE) →  → Hold (SCHLAGE)

PMC - Private Master Code, 6 digits.

GMC - Group Master Code, 6 digits.

(AC) - Access Code, 10 digits.

PC - Personalized Code, 3-6 digits.

www.eRentalLock.com

Vancouver, BC, Canada
info@