



Control property rental time remotely, securely, economically, and easily!

eRL-FE595 Keypad Commands

Change PMC	Press PMC → Press SCHLAGE → Press 0 → Press SCHLAGE → Press New PMC → Press SCHLAGE → Repeat New PMC
Set Date/Time	Press PMC → Press SCHLAGE → Press 1 → Press SCHLAGE → Press Date/Time YYMMDDHHMM
Delete Unwanted AC By PMC	Press PMC → Press SCHLAGE → Press 2 → Press SCHLAGE → Press Unwanted AC
Unlock/Disable Vacation Mode	Press PMC → Press SCHLAGE → Press 3 → Press SCHLAGE
Change GMC	Press PMC → Press SCHLAGE → Press 4 → Press SCHLAGE → Press New GMC → Press SCHLAGE → Repeat New GMC
Erase Memory	Press PMC → Press SCHLAGE → Press 5 → Press SCHLAGE
Turn Beeper On/Off	Press PMC → Press SCHLAGE → Press 6 → Press SCHLAGE
Enable/Disable Thumbturn Function	Press PMC → Press SCHLAGE → Press 7 → Press SCHLAGE
Enable Vacation Mode	Press PMC → Press SCHLAGE → Press 8 → Press SCHLAGE
Download Audit Trail	Press PMC → Press SCHLAGE → Press 9 → Press SCHLAGE
Delete Unwanted AC By AC	Press AC → Press SCHLAGE → Press Unwanted AC
Unlock By AC	Press AC
Create PC	Press AC → Press SCHLAGE → Press PC → Press SCHLAGE
Unlock By PC	Press PC → Press SCHLAGE
Restore All Factory Settings	→ Press SCHLAGE → → Hold SCHLAGE

PMC - Private Master Code, 6 digits.

GMC - Group Master Code, 6 digits.

AC - Access Code, 10 digits.

PC - Personalized Code, 3-6 digits.

www.eRentalLock.com